




1. Screw the mounting ring where product needs to be mounted.

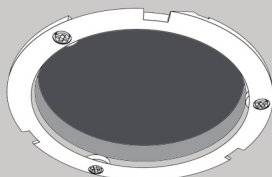


3. Punch the hole by the assistance of

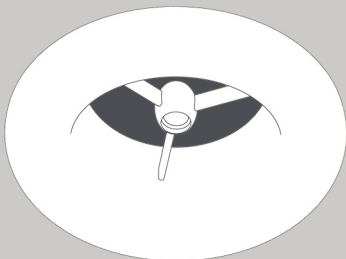


5. Place the fixture elements behind flanged diffuser where the gaps on the ring coincide with.

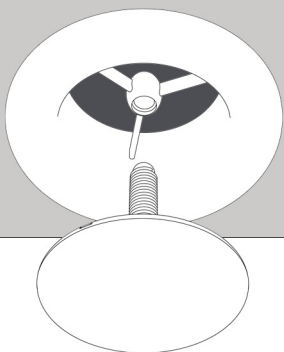


7. Screw the lid onto threaded hole at the middle of flanged diffuser.

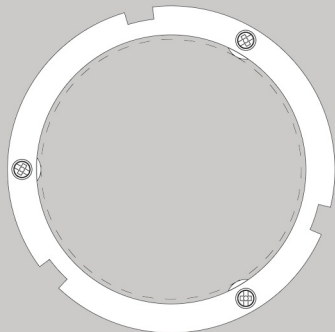


2. Use the fins on mounting ring as a template for punching a hole.

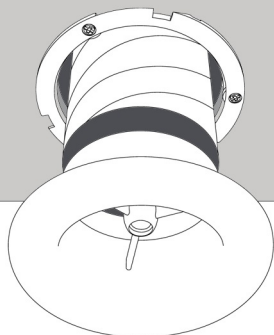

4. Connect the duct onto collar of flanged diffuser.

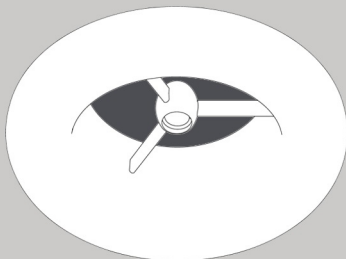

6. Turn the flanged diffuser clock-wise to secure locking.

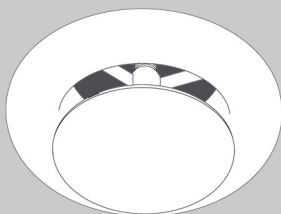

8. Rotate the lid to adjust air flow rate.